


SENA

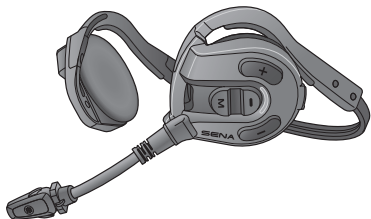

EXPAND MESH

BLUETOOTH® HEADSET WITH MESH INTERCOM™

QUICK START GUIDE

■ Downloadable Sena Software

Download the **Sena Outdoor App** at **Google Play Store** or **App Store**.



Sena Outdoor

- Device configuration setting

Download the following items at **sena.com**.



Sena Device Manager

- Firmware upgrade
- Device configuration setting



Quick Start Guide, User's Guide



Follow us on Facebook, YouTube, Twitter and Instagram to check the latest information and helpful tips.

SENA





Sena Technologies Co., Ltd.
Customer Support: **sena.com**

■ Product Details

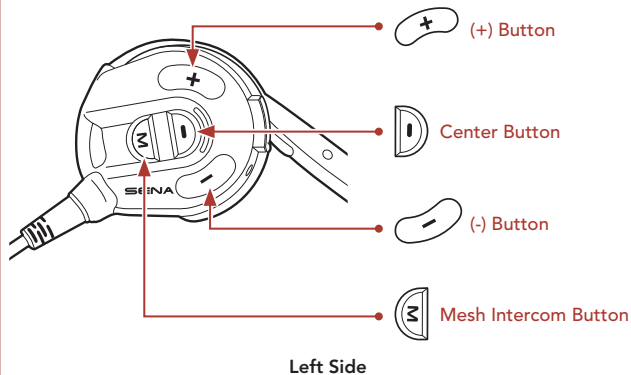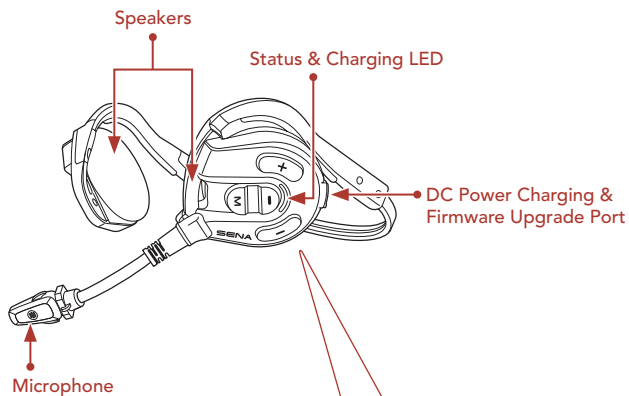

■ Wearing the Headset

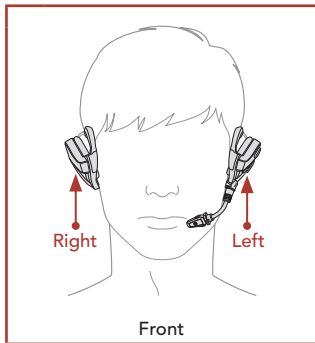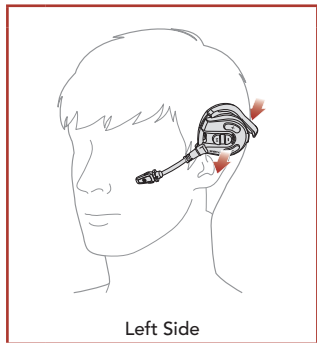

- For more information about installation, refer to the User's Guide.

■ Icon Legend



Tap button the specified number of times



Press and Hold button for the specified amount of time



"Hello"


Audible prompt

■ Basic Operations

Powering On



Powering Off

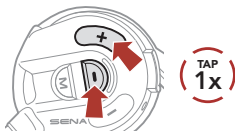

Volume Up



Volume Down



■ Checking the Battery Level

Powering On



■ Phone Pairing



- ② Select **Expand Mesh** in the list of Bluetooth devices detected.



- The headset will enter the **Phone Pairing mode** automatically when you **initially turn on** the headset.
- For more information on phone pairing, refer to the User's Guide.

■ Using the Phone

Answer a Call



End a Call



Reject a call



Call a Voice Assistant



■ Music Control

Play/Pause



Track forward



Track backward



■ Mesh Intercom™

Open Mesh™: communication within the same channel.

Group Mesh™: communication within the same private group.

- For more information on **Mesh Intercom**, refer to the User's Guide.

Mesh Intercom On



Blinking 



"Mesh intercom on,
Open Mesh, channel 1"

Mesh Intercom Off



"Mesh intercom off"

Note: When **Mesh Intercom** is on, the **Expand Mesh** will automatically connect to nearby **Expand Mesh** users and the headset will be in **Open Mesh** (default: channel 1) initially.

■ Open Mesh


Channel Setting (Default: channel 1) in Open Mesh

Using the Button

- ① Enter into the **Channel Setting**.



- ② Navigate between channels.
(1 → 2 → ... → 8 → 9 → Exit → 1 → ...)

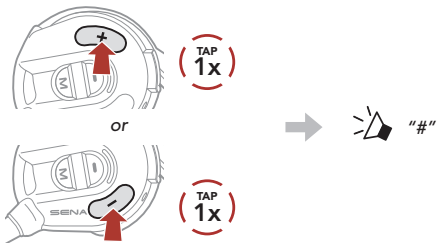

- ③ Save the channel.



Using the Sena Outdoor App


You can select the channel through the **Sena Outdoor App**.

■ Group Mesh

Group Mesh is a closed group intercom function that allows users to join, leave, or rejoin a group intercom conversation without pairing each headset.

1) Creating a Group Mesh

Creating a **Group Mesh** requires **two or more Open Mesh users**.

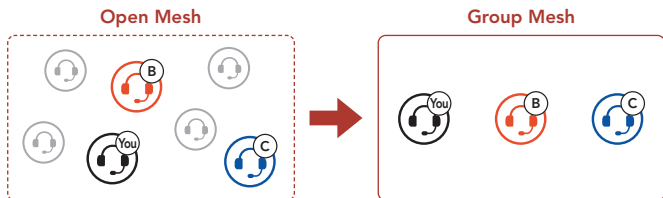

- ① **Users (You, B, and C)** enter into **Mesh Grouping** to create a **Group Mesh**.




- ② When **Mesh Grouping** is completed, the **users (You, B and C)** will hear a voice prompt on their headset as **Open Mesh** switches to **Group Mesh**.



2) Joining an Existing Group Mesh

One of the **current users** in an **Existing Group Mesh** can allow **new users (one or more)** in **Open Mesh** to join the **Existing Group Mesh**.

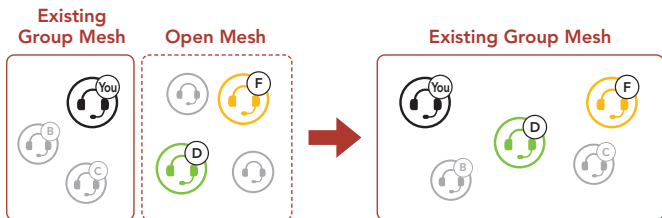

- ① One (**You**) of the **current users** in the **Existing Group Mesh** and **new users (D and F)** in **Open Mesh** enter into **Mesh Grouping** to join the **Existing Group Mesh**.



- ② When **Mesh Grouping** is completed, the **new users (D and F)** will hear a voice prompt on their headset as **Open Mesh** switches to **Group Mesh**.



■ Enable/Disable Mic (Default: Enable)

Users can enable/disable the microphone when communicating in a **Mesh Intercom**.



■ Mesh Reach-Out Request

You (caller) can send a request message to turn on the Mesh Intercom to nearby friends who have it turned off.

- ① If you want to send or receive a request message, you need to enable **Mesh Reach-Out** on the **Sena Outdoor App**.
- ② While your headset's Mesh Intercom is on, you (caller) send a request message using the **headset's Button** or the **Sena Outdoor App**.

[Caller]



[Caller]



[Nearby Friends]



- ③ Friends who receive the request message need to manually turn on their Mesh Intercom using the **headset's Button** or the **Sena Outdoor App**.

Reset Mesh

If a headset in an **Open Mesh** or **Group Mesh** resets the **Mesh**, it will automatically return to **Open Mesh (default: channel 1)**.

 


Configuration Menu

Accessing the Configuration Menu



Navigating Between Menu Options




Execute Menu Options




Troubleshooting

Factory Reset

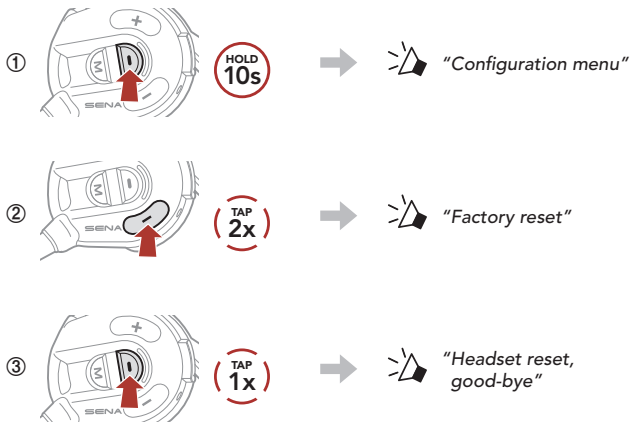



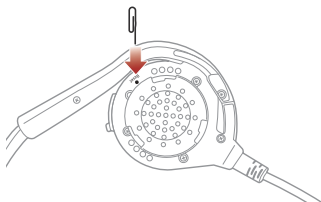
































Fault Reset



Note: Fault Reset will not restore the headset to the factory default settings.

Quick Reference

TYPE	OPERATION	BUTTON COMMANDS
 Basic Operations	Power on	  
	Power off	  
	Volume up/Volume down	 or  
 Mobile Phone	Answer phone call	 
	End/reject phone call	 
	Call a Voice Assistant	 
 Music	Play/Pause music	 
	Track forward	 
	Track backward	 

TYPE	OPERATION	BUTTON COMMANDS
 Mesh Intercom™	Mesh Intercom on/off	 
	Channel setting	 
	Mesh Grouping	 
	Enable/Disable Mic	 
	Mesh Reach-Out Request	 
	Reset Mesh	